



ADEL

SAFE & SMART DOORLOCK



USER MANUAL

- Thank you for purchasing HYUNDAI TELECOM products.
- Please carefully read this User's Guide(In particular,precautions for safety) before using a product and follow instruction to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation for the product.

FEATURES



USER PRECAUTIONS



DEFECT FREE, STRONG STURDY DOOR LOCK WITH KS & KC QUALITY CERTIFICATION



CHARACTER DISPLAY NOTIFICATIONS THE STATE WITH THE CHARACTERS ON THE NUMBER PAD IS DISPLAYED



STRONG & DURABLE BODY COMPONENTS MADE TO WITHSTAND HEAT AND ELECTRICAL SHOCKS



AUTOMATIC LOCK / RELOCK / DUAL LOCK / FEATURES DESIGNED TO FIT CONSUMER'S SECURITY NEEDS CONVENIENTLY



WITH PASSWORD PROTECTION FEATURES



MULTIPLE AUTHENTICATION METHOD USER CAN USE PIN OR RFID STICKER OR RFID KEYTAG



ADJUSTABLE VOLUME SETTING WITH MUTING FEATURES



10 KEY BLUE LIGHTED BUTTON FOR OPERATION AT NIGHT



 
EXTERNAL 9V EMERGENCY BATTERY TERMINAL



ANTI-SHOCK / FIRE / ANTI-HACKING SYSTEM



PLEASE DO NOT REPAIR THE PRODUCT BY YOURSELF

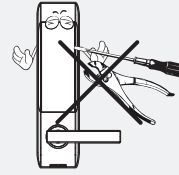


PLEASE CHECK ENVIRONMENT BEFORE INSTALLATION




READ THE MANUAL CAREFULLY



 
PLEASE DO NOT USE ANY OBJECT TO OPERATE THE LOCK

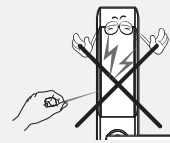

 PLEASE CHANGE YOUR PIN NUMBER PERIODICALLY

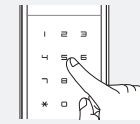

 PLEASE DO NOT KNOCK OR APPLY FORCE ON THE LOCK

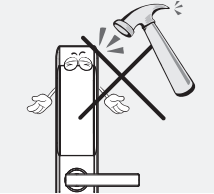


PLACE ONLY NEW BATTERIES




(LR6 AA)



 PROTECT THE PRODUCT FROM WETNESS OR MOISTURE

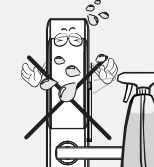

REPLACE ONLY WITH NEW BATTERIES

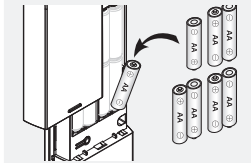 

CLEAN THE LOCK WITH CLEAN DRY CLOTH



PLEASE CONTACT YOUR DEALER OR SELLER IN-CASE OF DEFECT



PLEASE USE THE PRODUCT CORRESPONDINGLY



PRODUCT DIMENSION AND COMPONENTS 05

PARTS DESCRIPTION
FRONT BODY / IN BODY 06, 07

USER'S GUIDE

- 1 PIN NUMBER REGISTRATION 08
- 2 RFID CARD / KEYTAG REGISTRATION 09
- 3 RFID CARD / KEYTAG DELETION 10
- 4 OPENING DOOR OUTSIDE 10
- 5 CLOSING DOOR OUTSIDE 12
- 6 OPENING DOOR INSIDE 12
- 7 CLOSING DOOR INSIDE 13
- 8 FORCE LOCK SETTING 13
- 9 MANUAL LOCK LED SETTING 14

CONVENIENT SETTINGS

- 1 AUTO / MANUAL LOCK SETTING 15
- 2 RFID CARD / KEYTAG DETECTION SETTING 15
- 3 SILENT MODE SETTING 16
- 4 VOLUME SETTING 16
- 5 MULTI-TOUCH FEATURE SETTING 17

ALARM FEATURES

- 1 HIGHT TEMPERATURE ALARM 18
- 2 ANTI-INVASION ALARM 18
- 3 ANTI - PRANK & 1 MIN LOCK 18
- 4 DEADBOLT ERROR ALARM 19
- 5 REPLACE BATTERY ALARM 19

CONSUMER PROTECTION POLICY 20

PRODUCT WARRANTY 21


■ DIMENSION

ITEM		SPECIFICATIONS
INSTALLATION	DOOR THICKNESS	DOOR THICKNESS 40mm ~ 50mm
AUTHENTICATION	PIN NUMBER	4~12 DIGITS
	RFID CARD	30 KEYS CAN BE REGISTERED
VOLTAGE	DC 6 VOLTS	LR6 1.5V AA SIZED ALKALINE BATTERY 4 PCS
EMERGENCY BATTERY	DC 9 VOLTS	ALKALINE BATTERY SOLD SEPARATELY
TEMP. SENSOR	HEAT SENSOR TYPE	72° ± 5° (Testing Room)
		62° ± 5° (Normal Environment)
MATERIAL	FRONT BODY	AL, ZN, PC
	IN BODY	AL, ZN, ABS


■ RFID SPECS

ITEM	FREQUENCY	CHANNEL COUNT	MODULATION TYPE	ANTENNA POWER
RFID	13.56 MHZ	1 EA	ASK	93.5dBuV/m@10m(below)

 
■ COMPONENTS

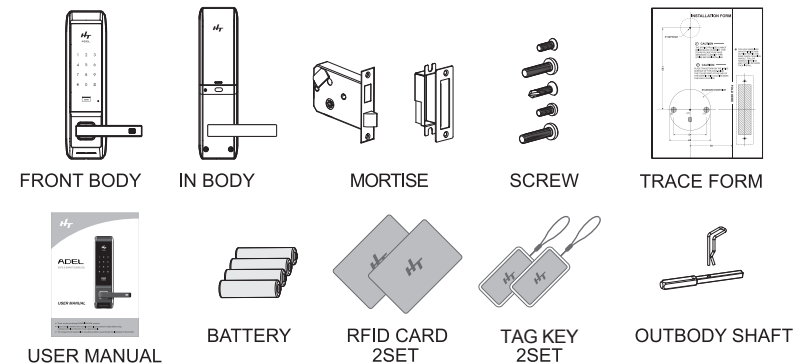

OUT BODY PARTS

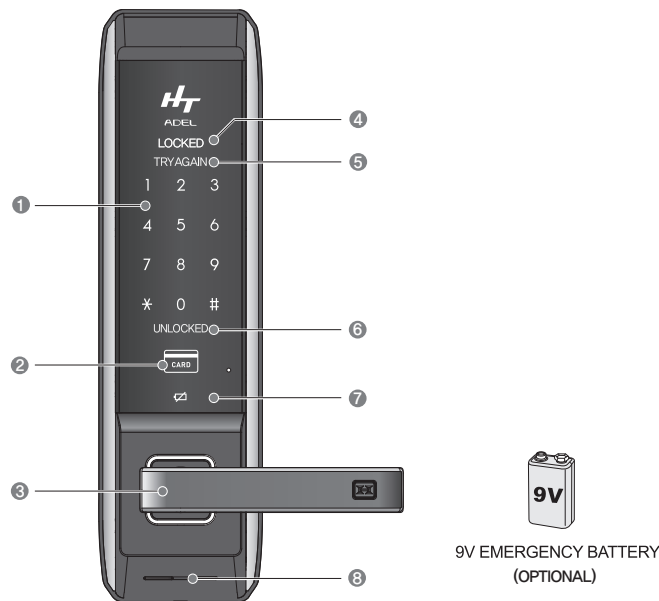 

IN BODY PARTS

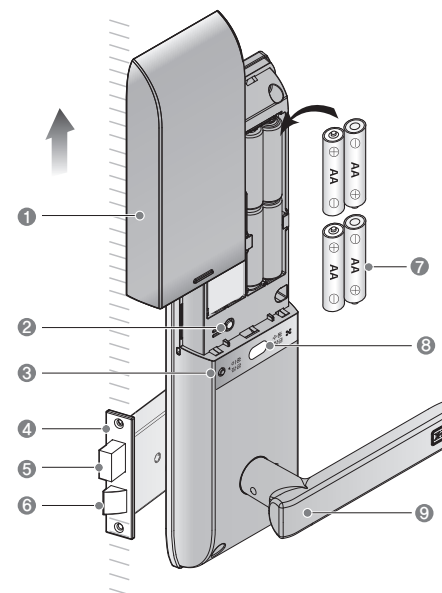 

NO.	PARTS	DESCRIPTION
①	NUMBER PAD	ENTER THE PIN NUMBERS ON THE NUMBER PAD AND THE DOOR WILL UNLOCK
②	RFID CARD SENSOR	PLACE THE RFID CARD ON THE SENSOR AND THE DOOR WILL OPEN
③	FRONT BODY HANDLE	USED IN OPENING OR CLOSING THE DOOR OUTSIDE
④	LOCKED	ILLUMINATES NORMALLY WHEN LOCKED
⑤	TRY AGAIN	LIT WHEN THE PASSWORD ERROR
⑥	UNLOCKED	LIGHTS UP WHEN OPENED NORMALLY
⑦	BATTERY STATUS LAMP	WHEN THE BATTERY IS DISCHARGED THE ALARM AND LIGHTING WILL BE OFF
⑧	9V BATTERY TERMINAL	RE-INITIALIZE THE LOCK BY PLACING A 9V BATTERY ON THE 9V BATTERY TERMINAL


NO.	PARTS	DESCRIPTION
①	BATTERY COVER	PROTECTS THE BATTERY AND REGISTRATION BUTTON
②	REG. BUTTON	PASSWORD OR SMART KEY IS USED TO REGISTER OR CHANGE THEM
③	DOUBLE LOCK BUTTON	THE FUNCTION TO NOT BE ABLE TO OPEN PASSWORD OR SMART KEY OUT DOOR
④	MORTISE	THE LOCKING DEVICE OF THE LOCK, MOVES WHEN LOCK OR UNLOCK
⑤	DEADBOLT	THE LOCKING DEVICE OF THE LOCK, MOVES WHEN LOCK
⑥	LATCH BOLT	FIX THE LOCKING POSITION
⑦	AA ALKALINE BATTERY	IS THE MAIN POWER SUPPLY OF THE LOCK
⑧	MANUAL LOCK BUTTON	ACTIVATES THE LOCK IN MANUAL MODE
⑨	IN BODY HANDLE	USED IN CLOSING OR OPENING THE DOOR INSIDE

1 PIN NUMBER REGISTRATION

⚠ PLEASE PERFORM REGISTRATION WHILE DOOR IS OPEN




 - 1 OPEN BATTERY COMPARTMENT COVER LOCATED IN THE IN BODY PRESS REGISTRATION BUTTON (BUZZER : BEEP)

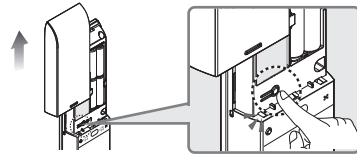


OUT OF DOORS

 - 2 ONE SURE THAT THE NUMBER PAD IS TURNED ON AFTER OUTDOOR PLATES

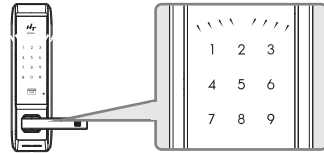


AT THE DOOR

 - 3 ENTER NEW PIN NUMBER TO BE REGISTERED (4~12 DIGITS) (BUZZER : BEEP)

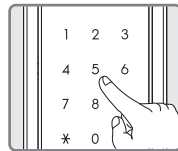

AT THE DOOR

 - 4 PRESS [*] BUTTON TO COMPLETE THE REGISTRATION (BUZZER : BEE-REE-REEP)

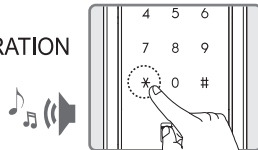

NOTE

WHEN ADD PASSWORD REGISTRATION, YOU REPEAT THE ABOVE NO. 3,4 BEFORE PLATE LAMP IS TURNED OFF. (UP TO 4 PIN NUMBER CAN BE REGISTERED)



 
CAUTION

IF NEW PIN NUMBER IS NOT REGISTERED WITHIN 10 SECONDS, THE REGISTRATION WILL BE CANCELLED(BUZZER : CANCEL SOUND) NEW REGISTRATION WILL DELETE OLD REGISTERED PIN NUMBER.

2 RFID CARD / KEYTAG REGISTRATION


⚠ THE SMART KEY ONCE FOR ALL NEWLY REGISTERED OR SMART KEY WHEN YOU HAVE TO RE-REGISTER YOU MUST REGISTER

- 1 OPEN BATTERY COMPARTMENT COVER LOCATED IN THE IN BODY PRESS REGISTRATION BUTTON (BUZZER : BEEP)

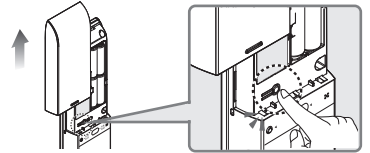


OUT OF DOORS

 - 2 ONE SURE THAT THE NUMBER PAD IS TURNED ON AFTER OUTDOOR PLATES

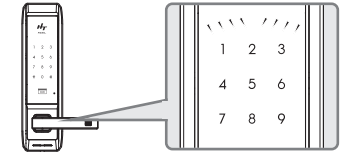


AT THE DOOR

 - 3 PLACE CARD/KEY TAG TO BE REGISTERED ON THE SENSOR (BUZZER : PROCESS SOUND) TO REGISTER ADDITIONAL CARD/KEYTAG, REPEAT STEP [3]

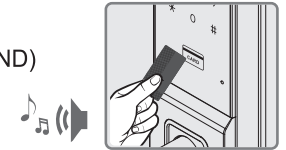

AT THE DOOR

 - 4 PRESS [REGISTRATION] BUTTON AGAIN TO COMPLETE REGISTRATION (BUZZER : COMPLETE SOUND)

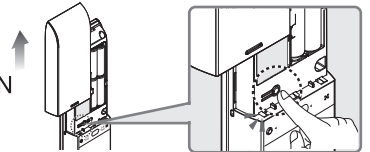

NOTE


WHEN ADD SMART KEY REGISTRATION, YOU REPEAT THE ABOVE NO. 3 BEFORE NUMBER PAD IS TURNED OFF. (UP TO 30 KEYTAGS CAN BE REGISTERED)





CAUTION

WHEN CARD IS NOT REGISTERED WITHIN 10 SECONDS THE REGISTRATION WILL BE CANCELLED(BUZZER : CANCEL SOUND) NEW REGISTRATION WILL DELETE OLD REGISTERED PIN NUMBER.

3 RFID CARD / KEYTAG DELETION

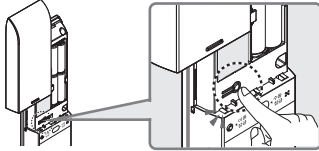- ① OPEN BATTERY COMPARTMENT COVER LOCATED IN THE IN BODY PRESS REGISTRATION BUTTON (BUZZER : BEEP)
 

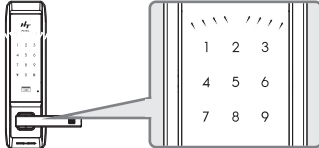- ② ONE SURE THAT THE NUMBER PAD IS TURNED ON AFTER OUTDOOR PLATES
 

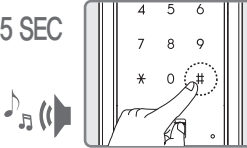
- ③ PRESS [#] BUTTON FOR 5 SECONDS WHEN THE CONFIRMATION MELODY IS HEARD ALL REGISTERED KEYTAGS ARE DELETED
 

4 OPENING DOOR OUTSIDE

STEP 1 OPENING BY RFID CARD


- ① AUTO-DETECT SETTINGS

WHEN YOU CONTACT A REGISTERED RFID CARD IN THE RFID CARD SENSOR INPUT CONFIRMATION TONE IT WILL OPEN THE DOOR AFTER RINGING.




- ② MANUAL DETECT SETTINGS


TOUCHING THE NUMBER PAD AND ONE SURE THAT THE NUMBER PAD IS TURNED ON IF THE REGISTERED RFID CARD INPUT ON THE SENSOR AFTER CONFIRMATION TONE AND DOOR IS UNLOCK

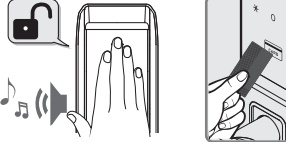


NOTE ALL READABLE RFID CARDS CAN BE USED, TOUCH NUMBER PAD, WHEN THE NUMBER PAD LIGHTS UP PLACE THE CARD ON SENSOR AND THE DOOR WILL OPEN

STEP 2 OPENING BY PIN NUMBER

- ① PLACE PALM ON NUMBER PAD THEN ENTER PIN NUMBER
 

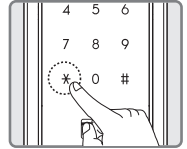- ② PRESS [*] BUTTON ON THE NUMBER PAD
 

- ③ A MELODY WILL BE HEARD AND THE DOOR WILL OPEN
 

OPENING WITH RANDOM NUMBER FEATURE

PROCEDURE : (BEFORE) ENTER ANY RANDON NUMBER + ENTER PIN NUMBER + [*] BUTTON.
(AFTER) ENTER PIN NUMBER + ENTER ANY RANDOM NUMBER + [*] BUTTON.
EITHER WAY, WHEN THE MELODY IS HEARD. THE DOOR WILL OPEN.

*** RANDOM NUMBER FEATURE IS ENABLED IN DEFAULT.

NOTE RANDOM NUMBER FEATURE IS THE RANDOM SET OF NUMBERS THAT IS ADDED BEFORE OR AFTER THE ORIGINAL PIN NUMBER IS ENTERED. IT IS USED TO PREVENT THE PIN NUMBER FROM BEING EXPOSED. INCLUDING THE PIN NUMBER UP TO 20 DIGITS ONLY CAN BE ENTERED DURING AUTHENTICATION WITH RANDOM NUMBER.

03 USER'S GUIDE

 


5 CLOSING DOOR OUTSIDE

STEP 1

AUTOMATIC MODE


- ▶ THE DOOR WILL CLOSE WITHIN 2 SECONDS AFTER CLOSING THE DOOR

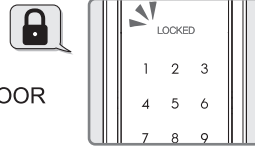

STEP 2

MANUAL MODE

 - ▶ PLACE PALM ON NUMBER PAD AND THE DOOR WILL CLOSE

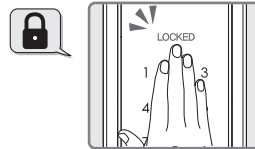

6 OPENING DOOR INSIDE

CAUTION

 
PLEASE OPEN THE DOOR WITHIN 7 SECONDS AFTER TURNING THE IN BODY HANDLE OR THE DOOR WILL BE LOCKED AGAIN



STEP 1

TURN HANDLE DOWNWARD

- ▶ TURN THE HANDLE DOWNWARD AND THE DOOR WILL OPEN

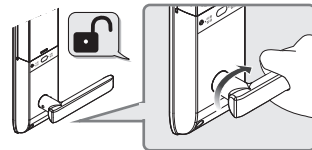

CAUTION

 
PULL OPEN THE DOOR TOWARD THE INTERIOR DO NOT INSTALL

7 CLOSING DOOR INSIDE

STEP 1

AUTOMATIC MODE


- ▶ THE DOOR WILL CLOSE WITHIN 2 SECONDS AFTER CLOSING THE DOOR

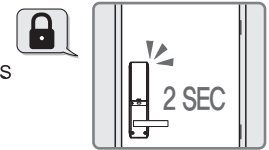

STEP 2

MANUAL MODE

 - ▶ PRESS THE [MANUAL LOCK BUTTON] AND THE DOOR WILL BE LOCKED

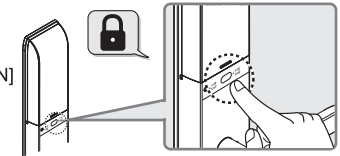

NOTE

 
WHEN THE MANUAL LOCK BUTTON IS PRESSED A MELODY WILL BE HEARD

8 FORCE LOCK SETTING

- **INSIDE FORCE LOCK** WHEN FORCE LOCK IS ACTIVATED INSIDE THE DOOR CANNOT BE OPENED FROM THE OUTSIDE


STEP 1

- ① AFTER CLOSING THE DOOR
- ② PRESS THE [FORCE LOCK] BUTTON LOCATED IN THE IN BODY FOR 3 SECONDS – WHEN THE CONFIRMATION MELODY IS HEARD, THE SETTING IS COMPLETE

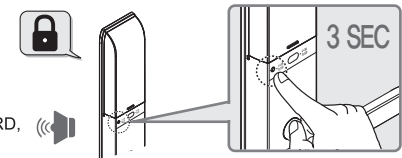

CANCELLATION

 
TURN THE IN BODY HANDLE DOWNWARD AND THE FORCELOCK SETTING IS CANCELLED

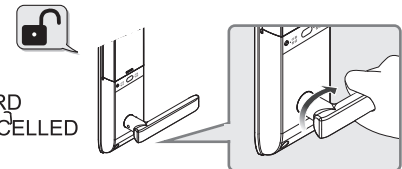

9 MANUAL LOCK LED SETTING

IN MANUAL LOCK MODE, WHEN THE DOOR IS CLOSED BUT NOT LOCKED THE NUMBER PAD WILL BLINK IF THE DOOR IS LOCKED PROPERLY THE NUMBER PAD WILL BE AS IT IS.

 
LED ON SETTING & CANCELLATION

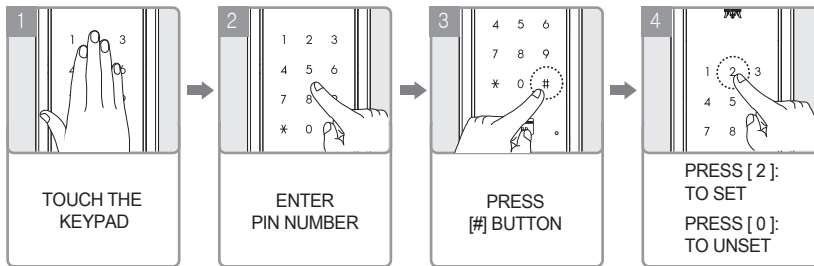

NOTE PRANK ALARM OR HIGH TEMPERATURE ALARM GOES OFF, THE LED ON TOUCH SCREEN WILL BE BLINKING FOR 2 MINUTES. IN LOW BATTERY STATUS, LED WILL BE BLINKING JUST ONCE TO LET YOU KNOW THE PROBLEM.
*** WHEN YOU BUY THE PRODUCT, THIS FUNCTION IS SET BY DEFAULT.


IN MANUAL LOCK SETTING

 ▶ If Door Is Open Or Manual Lock Is Set & Door Is Unlocked, The Door Is Not Locked, Led On The Screen Will Be Blinking With Beep Sound

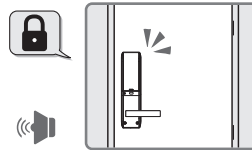

IN AUTO LOCK SETTING

 
▶ If door is open or Auto lock is set & door is unlocked, the door is not locked, LED on the screen will be blinking with Beep sound

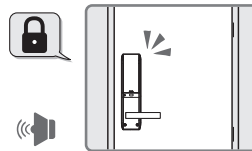

NOTE IN MANUAL LOCK MODE, DOOR IS NOT LOCKED, LED ON TOUCH SCREEN WILL BE BLINKING WITH BEEP SOUND.
IF THE DOOR IS LOCKED, NEITHER BLINKING NOR BEEP SOUND WILL BE FOLLOWED.

1 AUTO / MANUAL LOCK SETTING

 
THE AUTOMATIC DOOR LOCKING AND UNLOCKING FEATURE

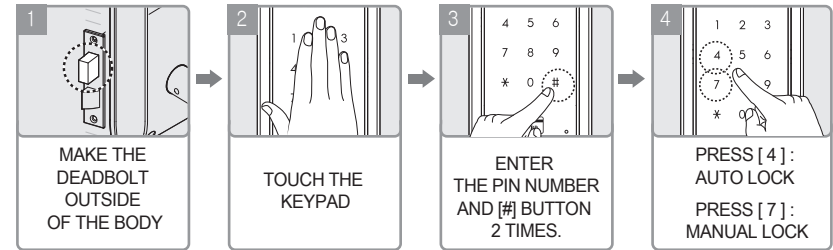

NOTE IN CASE OF MANUAL LOCK MODE, THE DOOR IS NOT LOCK JUST BY CLOSING THE DOOR. YOU SHOULD [LOCK] BUTTON ON INDOOR BODY OR TOUCH THE KEYPAD ON OUT-BODY.
*** WHEN YOU BUY THE PRODUCT, AUTO LOCK IS SET BY DEFAULT.

2 RFIDCARD / KEYTAG DETECTION SETTING

 THE RFID SENSOR READING CAN BE SET TO AUTO OR MANUAL SETTING

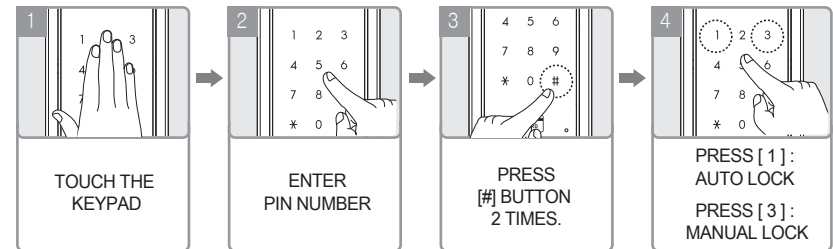


NOTE IN AUTO SENSE STATUS, YOU CAN OPEN A DOOR BY CONTACTING RFID CARD
IN MANUAL SENSE STATUS, FIRST TOUCH KEYPAD AND CONTACT RFID CARD TO OPEN A DOOR.
*** NEW PRODUCTS ARE SET WITH AUTO SENSE BY DEFAULT.

3 SILENT MODE SETTING


SETS THE AUDIO AND MELODY GUIDE TO SILENT MODE

SETTINGS

 - TOUCH THE KEYPAD AND PRESS THE [#] BUTTON (NO SOUND)



 - WITH PASSWORD
ENTER PASSWORD, PRESS [#] BUTTON, AND A DOOR WILL BE UNLOCKED (NO SOUND, AND ONLY KEYPAD LIGHT BLINKING)

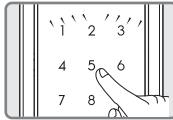


- WITH RFID
IF YOU TOUCH THE RFID CARD ON SMART KEY PAD IT OPENS THE DOOR.

NOTE THIS IS JUST FOR ONE TIME, SOUND WILL BE ACTIVATED FROM VERY NEXT TIME.

4 VOLUME SETTING

SETS THE VOLUME LEVEL OF THE AUDIO AND MELODY GUIDE . CAN BE SET UP TO 7 LEVELS

 SETTINGS

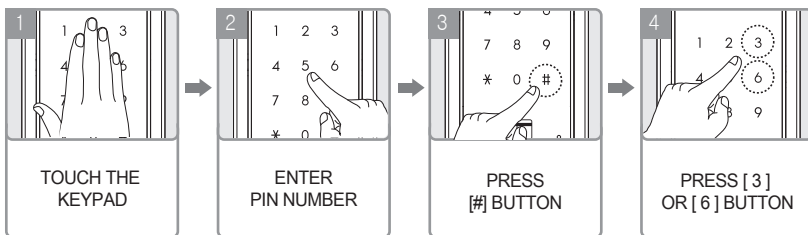


NOTE THIS IS JUST FOR ONE TIME, SOUND WILL BE ACTIVATED FROM VERY NEXT TIME.

5 MULTI-TOUCH FEATURE SETTING


NOTE

BESIDE PASSWORD, TOUCH AUTOMATIC RANDOM 3 NUMBERS. USEFUL TO REMOVE REMAINING FINGERPRINT SMUDGES AND PREVENT EXPOSURE OF PASSWORD. (ACTIVATED ONLY WHEN A DOOR IS CLOSED)
NEW PRODUCTS ARE NOT SET WITH MULTI-TOUCH SECURITY FUNCTION.

 
- TOUCH THE KEYPAD

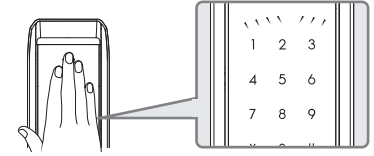


- ENTER PIN NUMBER

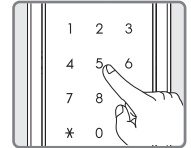 

- PRESS [#] BUTTON

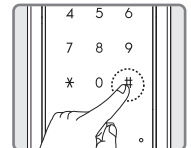 

 - PRESS [5] BUTTON AND MULTI-TOUCH SECURITY FUNCTION WILL BE SET WITH CONFIRMATION SOUND

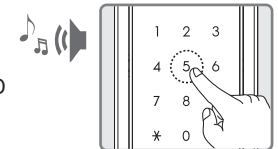

NOTE

IF YOU UNSET MULTI-TOUCH SECURITY, REPEAT STEP ①, ②, ③ AND ④ WHEN THE FUNCTION IS SET.

CAUTION

 
WHEN 'MULTI-TOUCH SECURITY' IS ON, FIRST PRESS PASSWORD AND 1 AUTOMATICALLY CHOSEN 3 RANDOM NUMBER WILL SHOW. PRESS THE NUMBERS AND [*] BUTTON THIS WILL AUTOMATICALLY BE OFF WHEN RANDOM NUMBER IS ON AND VICE VERSA.

05 ALARM FEATURES



1 HIGH TEMPERATURE ALARM


IF THERE IS A SITUATION ALONG WITH HIGH TEMPERATURE, WHICH CAN BE POSSIBLE FIRE, $62^{\circ}\text{C} \pm 5^{\circ}\text{C}$, THE ALARM WILL GO OFF. THE DOOR WILL BE UNLOCKED AUTOMATICALLY.

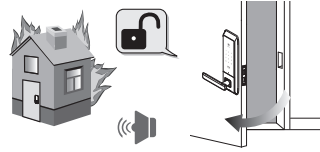

CAUTION IF THE INDOOR BODY IS EXPOSED BY DIRECT SUNLIGHT FOR LONG TIME, THE TEMPERATURE SENSOR WILL WORK AND WILL GO OFF THE ALARM. THE LOCK WILL BE UNLOCKED AUTOMATICALLY EVEN IN INSIDE FORCED LOCK STATUS.


2 ANTI-INVASION ALARM

 WHEN SOMEONE TRIES TO BREAK-IN BY OPENING A DOOR WHEN IT WAS LOCKED, THE ALARM WILL GO OFF. (MORE THEN 80DB)

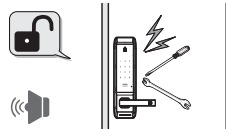

RELEASE ALARMS

 REMOVE BATTERIES, OR ENTER THE REGISTERED PASSWORD OR IC KEYS WHEN THE HIGH TEMPERATURE IS STILL DETECTED, THE ALARM CANNOT BE RELEASED.

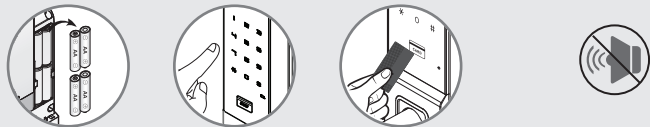


3 ANTI - PRANK & 1 MIN LOCK

IF A PASSWORD OR A IC KEY IS NOT REGISTERED IS ENTERED FOR 5 CONSECUTIVE TIMES, THE ALARM WILL GO OFF AND NOTHING WILL WORK FOR 1 MINUTE.



4 DEADBOLT ERROR ALARM

 
WHEN A DOOR IS OPENED OR CLOSED, IF A DROP BOLT WORK ABNORMALLY, THE ALARM WILL GO OFF WITH 'BEEP' SOUND FOR 3 TIMES.

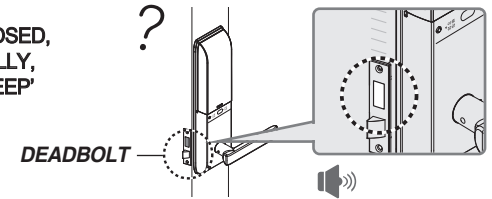

CAUTION IF DROP BOLT ALARM KEEPS GOING OFF AND THE LOCK IS NOT WORKING NORMALLY, THE LOCK MAY NEED BE TO RE-INSTALLED. PLEASE CONSULT WITH EXPERTS.

5 REPLACE BATTERY ALARM

 BATTERY ALARM GOES OFF WHEN LOCK DETECT IT HAS LOW BATTERY, WHEN YOU HEAR THE ALARM PLEASE CHANGE BATTERIES. MAKE SURE CHANGE THE ALL USED BATTERIES AND PUT ALL NEW ONES.

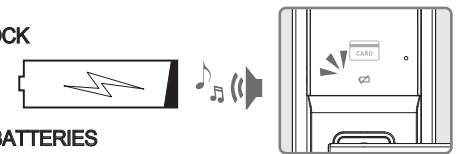

EMERGENCY POWER SUPPLY FOR DISCHARGED BATTERIES

- 1** PURCHASE A 9V BATTERY
- 2** PLACE THE BATTERY ON TERMINAL
- 3** PRESS [*] BUTTON
- 4** ENTER PIN NUMBER
- 5** PRESS [*] BUTTON AND THE DOOR WILL UNLOCK

CAUTION PLEASE USE BATTERIES FROM SAME MANUFACTURERS BECAUSE IT MAY LEAD LEAKAGE PROBLEM.



WHEN THE PRODUCT IS NOT PERFORMING NORMALLY. PLEASE CHECK FOLLOWING CONDITIONS BELOW AND FOLLOW TROUBLESHOOTING PROCEDURES. IF THE SAME PROBLEM OCCUR PLEASE CONTACT CUSTOMER SERVICE CENTER

PROBLEM	TROUBLESHOOTING PROCEDURE	PAGE
NOT TURNING ON	1. PLEASE CHECK BATTERY FOR DAMAGE AND CHECK CORRECT POLARITY PLACEMENT 2. MAKE SURE TO REPLACE OLD BATTERY WITH NEW ONES	PAGE 3
PIN NUMBER CANNOT BE CHANGED	1. PRESS REGISTRATION BUTTON UNTIL MELODY COMES OUT 2. REFER TO THE MANUAL FOR THE CORRECT PIN NUMBER REGISTRATION	PAGE 8
CANNOT OPEN THE DOOR WITH PIN NUMBER	1. CHECK IF THE ENTERED PIN NUMBER IS CORRECT 2. WHEN THE PIN NUMBER IS NOT ENTERED WITHIN 7 SECONDS ON THE NUMBER PAD. THE AUTHENTICATION WILL BE CANCELLED. PRESS [*] BUTTON AND ENTER PIN NUMBER AGAIN	PAGE 8
CANNOT OPEN THE DOOR WITH PIN OR CARD	1. TRY USING 9V BATTERY 2. THE DEADBOLT CAN BE DEFECTIVE. YOU MUST ASK FOR ASSISTANCE FROM SERVICE CENTER	PAGE 19
DURING OPERATION ALARM WON'T STOP	1. IT MUST BE THE REPLACE BATTERY ALARM 2. PLEASE REPLACE ALL BATTERY AT THIS TIME	PAGE 18
AUTOMATIC LOCK DO NOT WORK	1. SET TO AUTOMATIC MODE AGAIN 2. YOU CAN ALSO REPLACE THE BATTERY	PAGE 15

FOR CONSUMER PROTECTION WE FOLLOW CERTAIN POLICIES AS BELOW
INSTALLATION SHOULD BE DONE BY SKILLED INSTALLER ONLY.
DEFECTS THAT OCCURRED BECAUSE OF FAULTY INSTALLATION MAY NOT BE COVERED BY WARRANTY

FREE SERVICE

THE FREE SERVICE IS APPLICABLE WITHIN 1 YEAR UPON PURCHASE OF ITEMS
DEFECTS THAT OCCURRED DURING THIS PERIOD IS VALID FOR FREE REPAIR SERVICE

TYPE OF DAMAGE	COVERAGE DETAILS		
	Warranty Period	After Warranty	
DEFECTS THAT OCCURRED WITHIN 10 DAY AFTER PURCHASE	NEW REPLACEMENT		
DEFECTS THAT OCCURRED WITHIN 1 MONTH AFTER PURCHASE	NEW REPLACEMENT		
REPAIRABLE	THE SAME DEFECT OCCUR FOR 3 TIMES	FREE SERVICE	SERVICE COST OCCUR
	THE SAME DEFECT OCCUR FOR 3 TIMES	NEW REPLACEMENT	SERVICE COST OCCUR
IRREPAIRABLE	NEEDS REPLACEMENT OF PARTS WITHIN WARRANTY	NEW REPLACEMENT	DEPRECIATED COST
	DOESN'T NEED REPLACEMENT OF PARTS WITHIN WARRANTY	NEW REPLACEMENT	DEPRECIATED COST

WITH SERVICE FEE

1. NOT DEFECTIVE	WHEN CUSTOMER REQUEST FOR REPAIR BUT THE ITEM IS NOT DEFECTIVE READING. THE USER MANUAL SHOULD BE ADVISED CAREFULLY TO CONSUMER. THE ITEM IS NOT DEFECTIVE BUT THERE IS PROBLEM WITH INSTALLATION. REINSTALL AGAIN THE PIN NUMBER IS LOST AND THE LOCK WAS FORCED-FULLY OPEN RESULTING TO DAMAGE.
2. DEFECT CAUSED BY CONSUMER	DAMAGE CAUSED BY CONSUMER NEGLIGENCE. DAMAGE CAUSED BY FAULTY INSTALLATION BY UNSKILLED INSTALLER OR REPAIRED BY NON-ENGINEER DAMAGE CAUSED BY CARELESSNESS (DROPPING, KNOCKS ETC.)
3. OTHER FACTORS THAT CAUSED THE DEFECT	DAMAGED CAUSED BY NATURAL DISASTERS CONSUMABLE COMPONENTS REACH ITS END-LIFE CONSUMERS THAT REQUEST WARRANTY WITHOUT NO WARRANTY CARD

PRODUCT NAME	
SERIAL NUMBER	
DATE OF PURCHASE	
CUSTOMER NAME	
TELEPHONE NUMBER	
ADDRESS	

RESELLER BUSINESS NAME	
TELEPHONE NUMBER	
ADDRESS	
INSTALLER NAME	

* TO REQUEST AFTER SALES SERVICE THIS WARRANTY CERTIFICATE SHOULD BE PRESENTED PLEASE KEEP THIS DOCUMENT

1. THE PRODUCT QUALITY CERTIFICATE
2. THE WARRANTY PERIOD IS CALCULATED FROM THE DATE OF PURCHASE , PLEASE OBTAIN DATE OF PURCHASE

■ PRODUCT CERT, DETAILS

ITEM DESCRIPTION			
MODEL NAME	ADEL		
COUNTRY OF ORIGIN	SOUTH KOREA		
SOLE VENDOR	HYUNDAI TELECOM Co., Ltd		